 


CX-Center TECHNICAL SPECIFICATIONS

Frequency response:	90 Hz to 20,000 Hz
Sensitivity:	89 dB
Usable Power:	5 - 75 watts
Impedance:	8 ohms
Driver configuration:	(2) 4 inch drivers, and (1) 3/4 inch dome tweeter
Cabinet finish:	Black ash with grey cloth
Video applications:	Center channel shielded for use on or near television
Net weight:	9 lbs
Dimensions:	17.38" x 10.63" x 4.63"

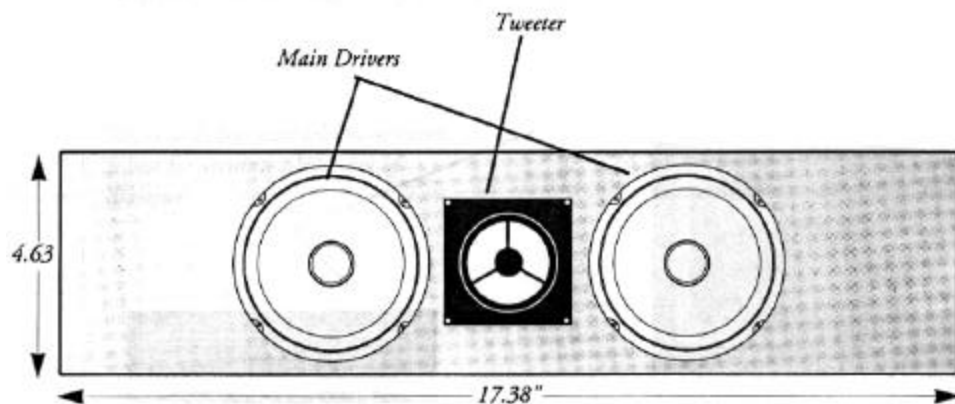

DCM[®] Corporation

670 Airport Boulevard
Ann Arbor, Michigan, 48108-1681
(313) 994-8481
Fax: (313) 994-0190



Monitor Series


CX-Center Owner's Instructions

Thank you for choosing the CX-Center loudspeaker system. This speaker was specifically designed to enhance your enjoyment of your home video entertainment system by precisely placing dialogue, sound effects, and music in space, improving the apparent position of sound images in relation to the video images on the screen. We're confident that the many benefits of the advanced technology incorporated into the CX-Center will add to your listening enjoyment for years to come.

UNPACKING

The shipping carton contains one CX-Center speaker and a warranty card. After carefully unpacking your CX-Center, please save the box and the packing materials for possible use later. If the speaker appears to be damaged, please do not attempt to connect it. Repack the speaker in its original carton and notify your DCM dealer.

CONNECTION

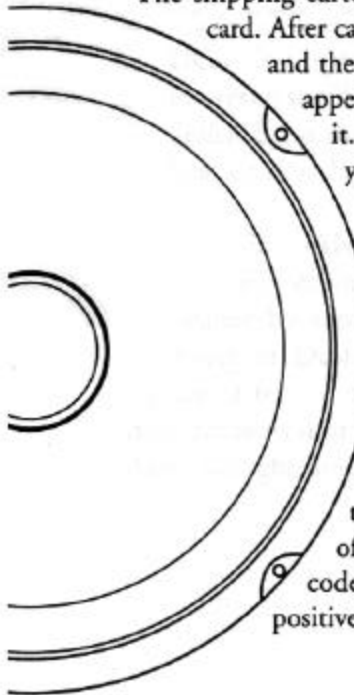


Turn off your amplifier and unplug it from the power outlet before attempting to connect your speakers. We recommend 18 gauge (or larger) speaker wire. Strip away approximately 1/2 inch of insulation off each wire conductor. Connect one conductor to the negative (black) terminal of the speaker. Connect the other end of the same conductor to the negative output terminal on the center channel of your amplifier. Note that most speaker wire is color coded, or ribbed on one side, for easy identification of positive and negative leads. *(continued)*

CONNECTION *(continued)* Similarly, connect the positive (red) terminal of the speaker to the positive output terminal in the center channel of your amplifier. Be sure there are no loose strands of wire at the terminals. Loose wires can create short circuits that may damage the amplifier. You may plug in your amplifier and begin to enjoy your CX-Center.

SPEAKER PLACEMENT

For use as the dialog channel in a Dolby Pro-Logic surround system, we recommend placing the CX-Center directly above or below your television screen. The woofers and tweeters of the speaker are magnetically shielded, preventing any video distortion from this close proximity placement. If space does not permit placing the CX-Center above or below, it is recommended that you place the speaker on its side, standing up next to the video screen. Having the speaker as close to the screen as possible will help localize voices to the image on screen, and improve the intelligibility of the dialog.

Above or below your television screen is best for accurate placement of dialogue

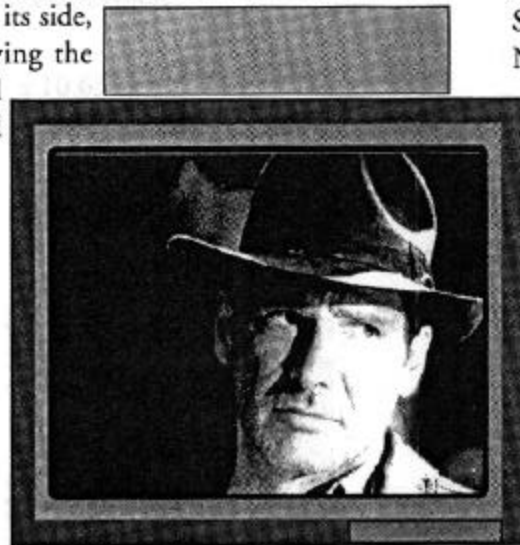

The CX-Center may also be placed vertically to the side of your television screen.

FUSING

Any speaker can be damaged if the amplifier driving it should fail. Damage may also occur by playing music so loudly that it sounds distorted. This can happen even with a low powered amplifier. Although the CX-Center is very sturdy, fusing can provide additional protection, and under certain operating conditions, may be recommended.

To properly install a protection fuse (not provided), a fuse holder should be inserted into the positive (+) wire connecting the speaker to your amplifier. Use one and one quarter ampere, fast-blow Buss AGC Series or equivalent fuses.

SERIAL NUMBER

Now is the best time to fill in your warranty card, recording serial number, date of purchase, and dealer name and address. The serial number is located on the top flap of the outer carton, and next to the inputs on the back of the cabinet.

WHAT TO DO IF YOU NEED SERVICE

DCM loudspeakers have a history of extremely high reliability. However, should your CX-Center require service, please contact your dealer. If for some reason this is inconvenient, please contact DCM Corporation directly.

MAINTENANCE

The vinyl cabinetry of your CX-Center loudspeaker can be cleaned by wiping with a soft, damp cloth and a mild detergent. Dust may be wiped from the grille cloth with a piece of felt, or carefully vacuumed if necessary. Do not place speakers near radiators or other heat sources, such as direct sunlight, since these may fade colors over time.

